BarDIMM Box Guide

04/07/2022 Edition 4

Link to BarDIMM Manual: https://support.celiveo.com/helpdesk/attachments/79013742691



Step 1: Download the JetSpool configuration utility: <u>https://support.celiveo.com/helpdesk/attachments/79015934847</u>



Step 2

1. After downloading JetSpool, unzip Jetspool.zip and launch Jetspool.exe, click **OK**.

JetSpool 4.1	
File Options About	
File to send	Select a device
Files filter No filter (*,*)	<u> </u>
A: S9. PRN AUTOEXEC boot.ini Documents and Settings CONFIG.SY Program Files M5DOS.SY RECYCLER NTDETECT System Volume Information pagefile.sy	.BAT 'S 5.COM
WINDOWS	
Settings	
Devices discovery	
Broadcast IP mask : 192.168.0.255	
Broadcast timeout (ms) : 1000	
Also perform discovery of BarDIMM Boxes	- 1
Display web page by double clicking on a printer	
Web browser Force Internet Explorer usa	je 💌
OK Cancel	

2. Click the **Options** tab, select **Settings**. Check "Also perform discovery of BarDIMM Boxes" and click **OK**.



Step 3

1. Click on '**Select a Device**'. You should see the JBOX2 in the list of devices, if not click '**Update list**' to display JBOX 2.

🖉 JetSpool 4.1		
File Options About		
Target device		Select a file to send
Name	IP address	Device type
HP Color LaserJet CM3530 MFP	192.168.0.93	HP printer
HP LaserJet P4015	192.168.0.96	HP printer
HP Color LaserJet CM4730 MFP	192.168.0.90	HP printer
HP LaserJet M4345 MFP	192.168.0.91	HP printer
HP Color LaserJet CP5520 Series	192.168.0.120	HP printer
HP LaserJet M3035 MFP	192.168.0.95	HP printer
HP Color Laser Jet CM4540 MFP	192.168.0.94	HP printer
JBOX2	192.168.0.110	BarDIMM Box
		Update list
Selected file :		
Selected printer :		
,		
Transfer type : LPR	•	Send to printer
,		
0	iit l	

2. Copy and paste IP Address given to JBOX2 into a web browser to enter BarDIMM configuration.



Step 4

1. Enter username and password you wish to use.

These login credentials will be the login credentials set for the BarDIMM box, as indicated on page 14 of the Manual section 4.1.2. "Connecting to the Web Server of the BarDIMM Box"

2. Click the **Network** tab on the left menu.

network

This option allows the configuration of the network parameters, the DHCP, and the fixed IP:

network	
network settings	
host name	
host name	JBOX2-001 BEB0901 FD
ip lookup met	thod
💿 dhop	
O manual	
ip address	192.0.0.192
subnet mask	255.0.0.0
gateway	0.0.0.0
lan speed	
💿 auto	
O 10 half duple	х
◯ 10 full duplex	
O 100 half dupl	ех
🔘 100 full duple	X
warning: remem	ber to restart the print server after the modifications.
save	
save	

Host name: Host name for the BarDIMM Box. Please change it to the name of the printer it is attached to (ie: "BDBox_LJ1300_Sales").

IP lookup method DHCP: Keep "DHCP" to let your network DHCP server automatically assign an IP address to the BarDIMM Box. Select "Manual" to manually assign all network parameters. **LAN Speed**: Keep "Auto" or force the LAN setting if necessary. **Save**: Click on "Save" to keep the new settings.

Important note: the BarDIMM Box must be rebooted to use the new settings. This is done by clicking on the **Restart** button in the home page.

Don't forget to update your browser address as the IP address of the box will be changed as per your wish.



3. Click the **Printer** tab on the left menu.

printer

This screen allows you to define where the target printer is: connected to the built-in USB port (lan2USB), or attached to the network (lan2lan). In the latter case, both the IP address and the port must be indicated.

PCL5e USB	or LAN printer	
Di What is BarDIM The BarDIMM Box brings onnectivity. BarDIMM Box etmobile BarSIMM, BarD olutions to print quickly a	M Box ? the BarDIMM technology c supports one printer, throw IMM (formerly known as Jund accurately barcodes on	to all PCL5e compatible printers and to legacy hp printers equipped with USB or LA ugh network or USB. etCAPS BarSIMM and BarDIMM), BarDIMM tm Pro are the most complete and the easie: HP LaserJet printers.
home	printer	
network	printer settings	
printer	input parame	ters
atorago	raw port	9100
storage	Ipd queue	raw
freescape	printer conne	ection
firmware	 usb 	
log	O lan	
custom page	ip or name*	0.0.0
restore	port	9100
reetart	log	
i sətali t	log	
logout	_	
links	* note on name	: dns servers are required, not resolved name are invalid.
BarDININ www.jetmobile.com	save	

4. Click on the **Save** button to keep the new settings.

BarDIMM Box PrintServer Easily print barcodes from SAP R/3, other ERPs, Unix, Windows on any PCL5e USB or LAN printer			
The BarDIMM Box Print is BarDIMM Box ? The BarDIMM Box brings the BarDIMM technology to all PCL5e compatible printers and to legacy hp printers equipped with USB or LAN connectivity. BarDIMM Box supports one printer, through network or USB. Jetmobile BarSIMM, BarDIMM (formerly known as JetCAPS BarSIMM and BarDIMM), BarDIMM tm Pro are the most complete and the easiest solutions to print quickly and accurately barcodes on HP LaserJet printers.			
home	B save		
network	save settings		
printer	information : the configuration has been saved. the box requires a restart to apply new configuration		
storage			
freescape			
firmware			
log			
custom page			
restore			
restart			
logout			
► links ► ar D MM > www.jetmobile.com			

5. Click the **Restart** tab on the left menu.



What is BarDIM he BarDIMM Box brings onnectivity. BarDIMM Bo etmobile BarSIMM, BarD olutions to print quickly a	M Box ? the BarDIMM technology to all PCL5e compatible printers and to legacy hp printers equipped with USB or L4 x supports one printer, through network or USB. NMM (formerly known as JetCAPS BarSIMM and BarDIMM), BarDIMM tm Pro are the most complete and the easier nd accurately barcodes on HP LaserJet printers.
home	■ restart
network	restart bruit servei
printer	warning : print server will be restarted.
storage	restart
freescape	-
firmware	
log	
custom page	
restore	
restart	
logout	-
links	

6. When prompted, click the **Restart** button.

